


alcatel PLUS

10" 4G Windows

2^{-IN-}**1** Convertible Tablet

QUICK START GUIDE

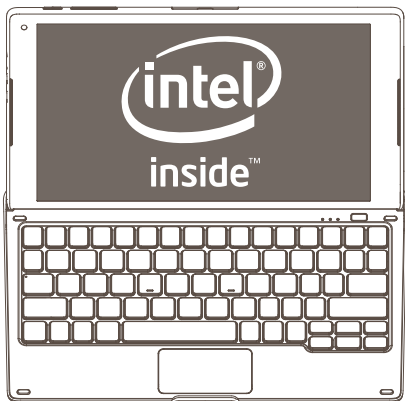

8085

LKB001X


CJB1FH002AAA

Table of contents

1	Getting started	1
1.1	Appearance	1
1.2	Charging the tablet and keyboard	3
1.3	Inserting microSD and SIM cards	4
1.4	Connecting to a keyboard hotspot	5
1.5	Mode switchover	6
2	Windows features	7
2.1	Start menu	7
2.2	Action centre	8
2.3	Search	8
2.4	Task view	9
2.5	Settings	9
3	Working with keyboard	10
3.1	Folding your tablet	10
3.2	Touchpad gestures	11
3.3	3G/4G button	12
3.4	Keyboard indicators	12
3.5	Keyboard setup	14

Getting started

1.1 Appearance

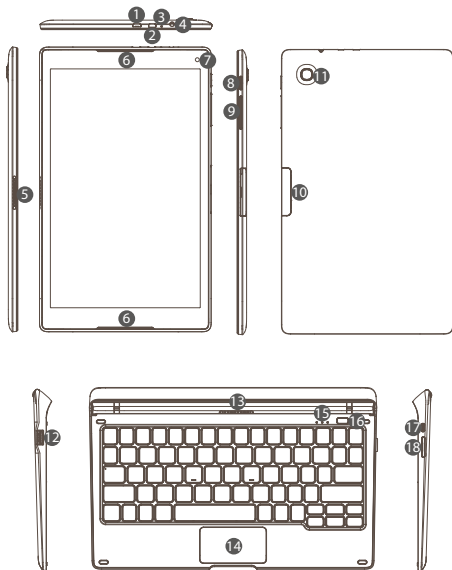


Number	Function
1	Micro USB port
2	Micro HDMI port
3	Microphone
4	Headset port
5	Connectors to keyboard
6	Speaker
7	Front camera
8	Power key
9	Volume Up/Down
10	microSD card slot
11	Rear camera
12	USB port
13	Connectors to tablet
14	Touchpad
15	Power, Wi-Fi, and data indicators
16	3G/4G button
17	Micro USB port
18	SIM card slot

1.2 Charging the tablet and keyboard

It is advisable to charge your tablet and keyboard in preparation for their first use. The micro USB port on your tablet can be used to charge the tablet directly, while that on the keyboard can charge both your tablet and keyboard.

Before charging, please note the following:

- Select the micro USB port (upper) instead of the micro HDMI port (lower).

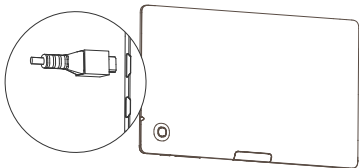


- In case you want to charge the tablet from the micro USB port placed on the keyboard, the tablet must be correctly docked on the keyboard in laptop mode.




1.3 Inserting microSD and SIM cards

Insert the microSD card to expand your tablet's storage.

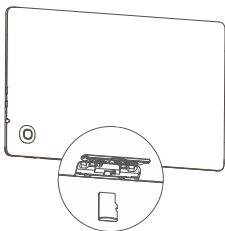


Insert a 3G/4G SIM card into the SIM card slot and dock your tablet correctly with the keyboard to start the amazing Plus10 experience.

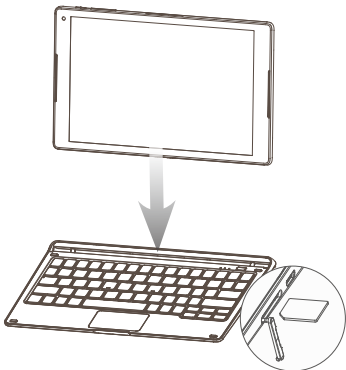

1.4 Connecting to a keyboard hotspot

The keyboard creates a hotspot after you insert your 3G/4G SIM card. By connecting your tablet to the hotspot, you can enjoy internet services, such as online chats, webpage browsing, videos, games, etc.

- Insert a 3G/4G SIM card in the keyboard slot.
- Press the 3G/4G button. The data and Wi-Fi indicators will turn green.
- In the taskbar of the tablet screen, touch the Wi-Fi icon  and then select "PLUS 10 LTE KB_xxxx" in the hotspot list.
- Enter the default password "12345678" to confirm.
- In the window that pops up, enter the default login password "admin".
- Enter the PIN code¹ of your SIM card.

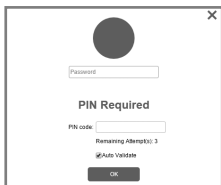A screenshot of a "PIN Required" dialog box. At the top is a large black circle. Below it is a "Password" input field. The title "PIN Required" is centered. Below the title is a "PIN code:" label followed by a PIN input field. Underneath the PIN field, it says "Remaining Attempt(s): 3". There is a checkbox labeled "Auto Validate" which is checked. At the bottom is an "OK" button. A close button (X) is in the top right corner.

- When the connection is successful, the Wi-Fi icon becomes .

Note: By default, the hotspot name is "PLUS 10 LTE KB_xxxx", and its password is "12345678". To protect your personal data, you are advised to change them by logging in to the Web UI when using it for the first time.

¹ The PIN code may not be required in some countries.

1.5 Mode switchover

Once your tablet has started, you can choose your preferred viewing mode.

When you separate your tablet from the keyboard, it supports switchover between the landscape and portrait modes.

When you dock your tablet on the keyboard, it switches to the laptop mode.



Landscape mode



Portrait mode



Laptop mode

2 Windows features


You can use Windows features when the tablet is operated independently or in laptop mode. This guide uses the independent tablet as an example to describe these features.

2.1 Start menu

Touch the  key to switch to the Start menu.

- Move all of the apps you use most frequently to your Start menu for quick access. You can rearrange, resize, add, and remove the tiles whenever you want.
- By touching  at the lower left of the Start menu, you will find quick links to File Explorer, Settings, Power (shut down, sleep, and restart), and All apps.
- Frequently used apps appear at the upper left.
- Your name and profile picture appear at the top of the left side. Select them to change your account settings, lock the screen, or sign out.

Touch a tile to open an app.

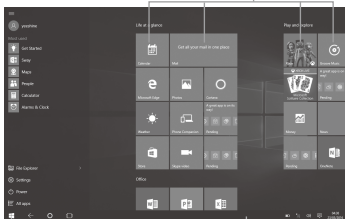

Touch to go back to the Start menu.


Taskbar

- Status/Notification indicators
- Touch an icon to view more

2.2 Action centre

Swipe in from the right edge of the screen or touch  in the taskbar to open the Action centre.

Here you can access common settings like Wi-Fi connections or screen brightness. When there are notifications, they appear at the top of the Action centre.

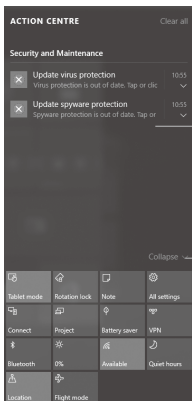

Notifications appear here.

Touch to make the common settings area smaller.


2.3 Search

Go to  and select Cortana or touch  in the taskbar. Then enter your question in the search box.

2.4 Task view

Swipe in from the left edge of the screen or touch  on the taskbar to see all your open apps. Select an app to focus on or close an app by touching the "X" in the upper-right corner of the app.


Touch to view the details of a running task.

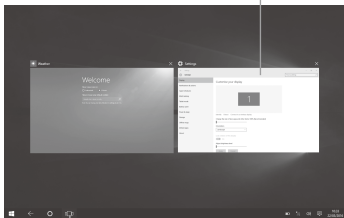

Touch to enter or exit task view mode.

2.5 Settings

Select  > **Settings** in the Start menu or  > **All settings** in the taskbar to access all your settings.

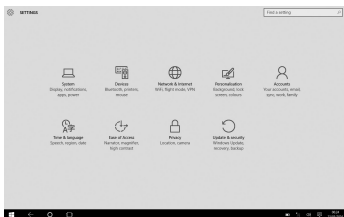

3 Working with keyboard

The keyboard enables your tablet to work as a laptop by providing physical keys, a gesture-enabled touchpad, and the option to connect a mouse, a smartphone, another tablet, etc.

3.1 Folding your tablet

When you fold your tablet with the keyboard, it becomes more portable, occupies less space, and goes to sleep to extend the battery life.



3.2 Touchpad gestures

The keyboard touchpad supports eight gestures to make operations much easier.

One finger



Double touch to start an app. This equals the effect of left-clicking using a mouse.



Double touch and slide to move an icon across the screen.

Two fingers



Touch to show the attributes of an object. This equals the effect of right-clicking using a mouse.



Touch and slide up and down for scrolling up and down.



Draw two fingers apart or together to scale an element on the screen.

Three fingers



Touch to start the Cortana search assistant.



Touch and slide left or right to switch between tasks.

Four fingers



Touch to show the Action centre.

3.3 3G/4G button

The 3G/4G button is located at the upper right corner of the keyboard. Different durations of pressing enable the corresponding operations.

Duration	Operation
Short press	Start up the keyboard.
	Wake up the Wi-Fi hotspot when it goes dormant.
2s	Shut down the keyboard.
8s	Forcibly restore the factory settings of the keyboard. After all the indicators blink green three times, the restoration is complete.

3.4 Keyboard indicators

You can learn about the keyboard's status by checking the power () , Wi-Fi () , and data () indicators.

Power indicator

Always red	Battery lower than 20%
Blinks red with 1s intermittence	Battery lower than 20% and charging
Blinks green with 1s intermittence	Battery higher than 20% and charging
Off	Full battery
Always green	Keyboard started up

Turns off after blinking red for 3s	Battery very low and unable to start up the keyboard
-------------------------------------	--

Turns off after blinking red for 0.1s	Keyboard being shut down
---------------------------------------	--------------------------

Wi-Fi indicator

Always green	Wi-Fi hotspot activated
--------------	-------------------------

Off	Wi-Fi hotspot deactivated
-----	---------------------------

Data indicator

Blinks red with 0.5s intermittence	SIM card not inserted or detected
------------------------------------	-----------------------------------

Blinks green with 0.1s intermittence	Searching for 3G/4G data service
--------------------------------------	----------------------------------

Blinks red with 0.2s intermittence	An SMS message received but not read
------------------------------------	--------------------------------------

Always red	SIM card detected without 3G/4G data service
------------	--

Always green	3G/4G data service available
--------------	------------------------------

Off	Keyboard shut down
-----	--------------------

3.5 Keyboard setup

After your tablet is connected to the keyboard hotspot, you can set up your keyboard using the Web UI.

- Open the browser, enter "192.168.1.1" or "plus10.home" in the address bar and confirm.
- On the page that appears, enter the default password "admin" to log in to the Web UI.
- From here you can alter settings for your SIM card, data usage, SMS, online updates, and other keyboard features.

